Pinewood Derby Car Display Stand

12/15/2002 - JKY

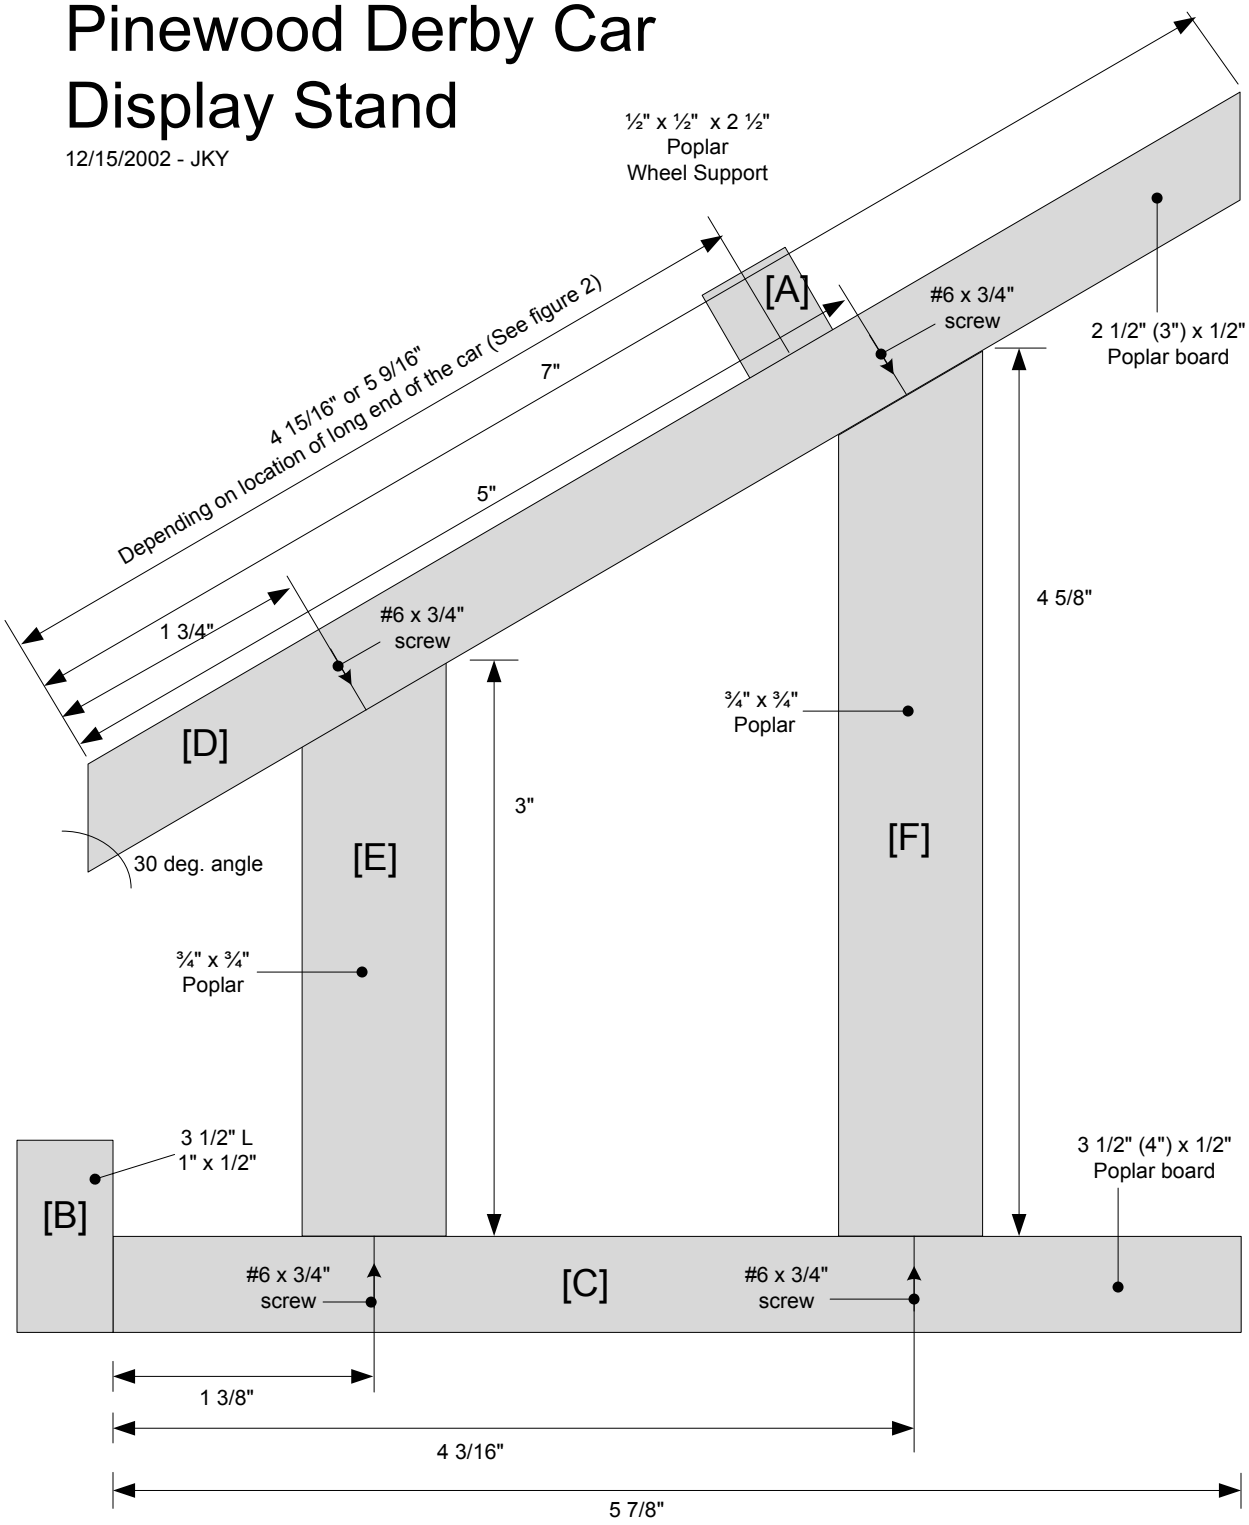

Notes:
1. Assemble all components with glue.
2. Drill pilot holes before assembling pillars with #6 screws - screws and holes should be centered.
3. Small naills may be used to attach name plate display and wheel support in addition to glue. If so, drill pilot holes for nails to avoid splitting.
4. After assembly, sand , stain or paint to taste

Assembly Order:
1. Attach Wheel Support [A] to top [D] (determine location based on whether the long end of your car is in the front or back)
2. Attach label block [B] to front of base [C]
3. Attach legs [E] and [F] to base [C] using glue and screws
4. Attach top [D] to legs [E[and [F] using glue and screws

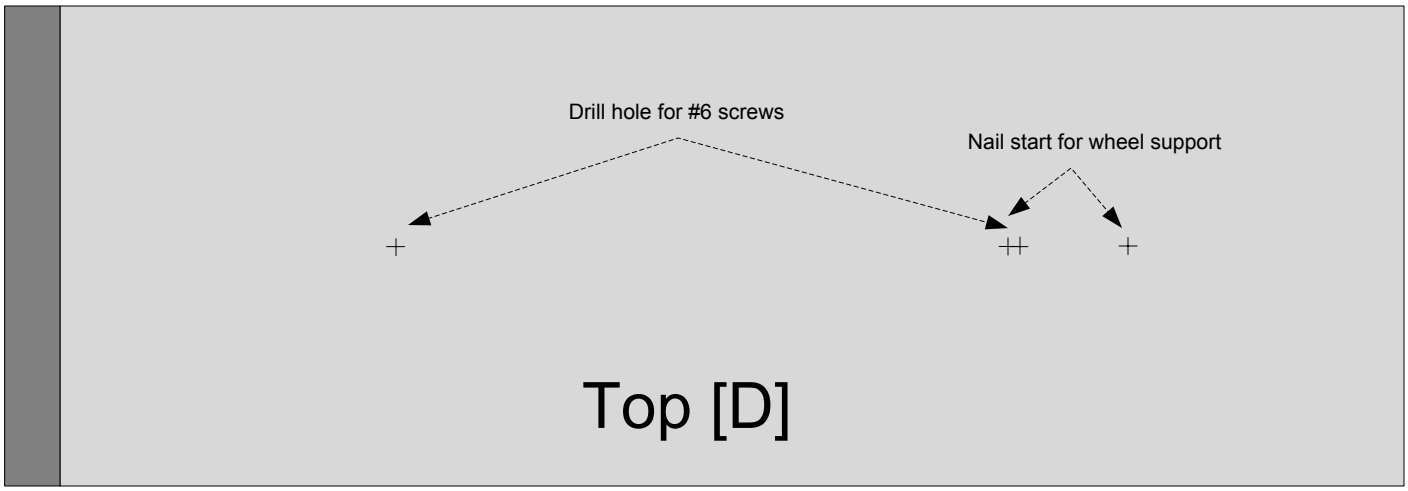
Drill hole for #6 screws
Nail start for wheel support
Top [D]

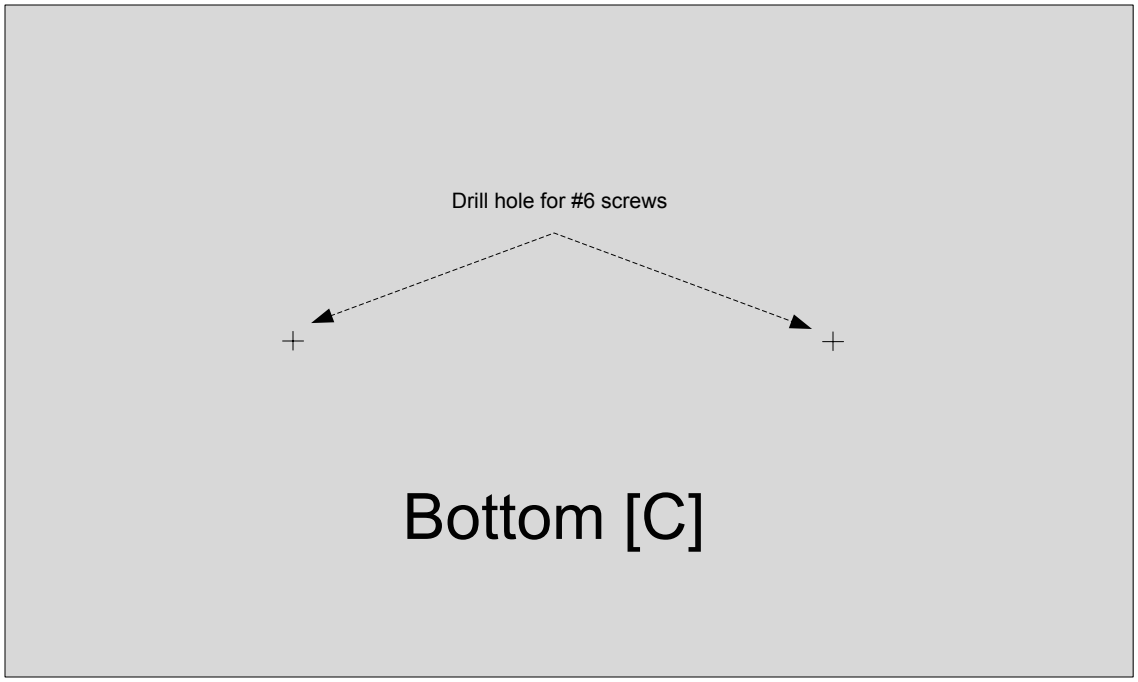
Drill hole for #6 screws
Bottom [C]

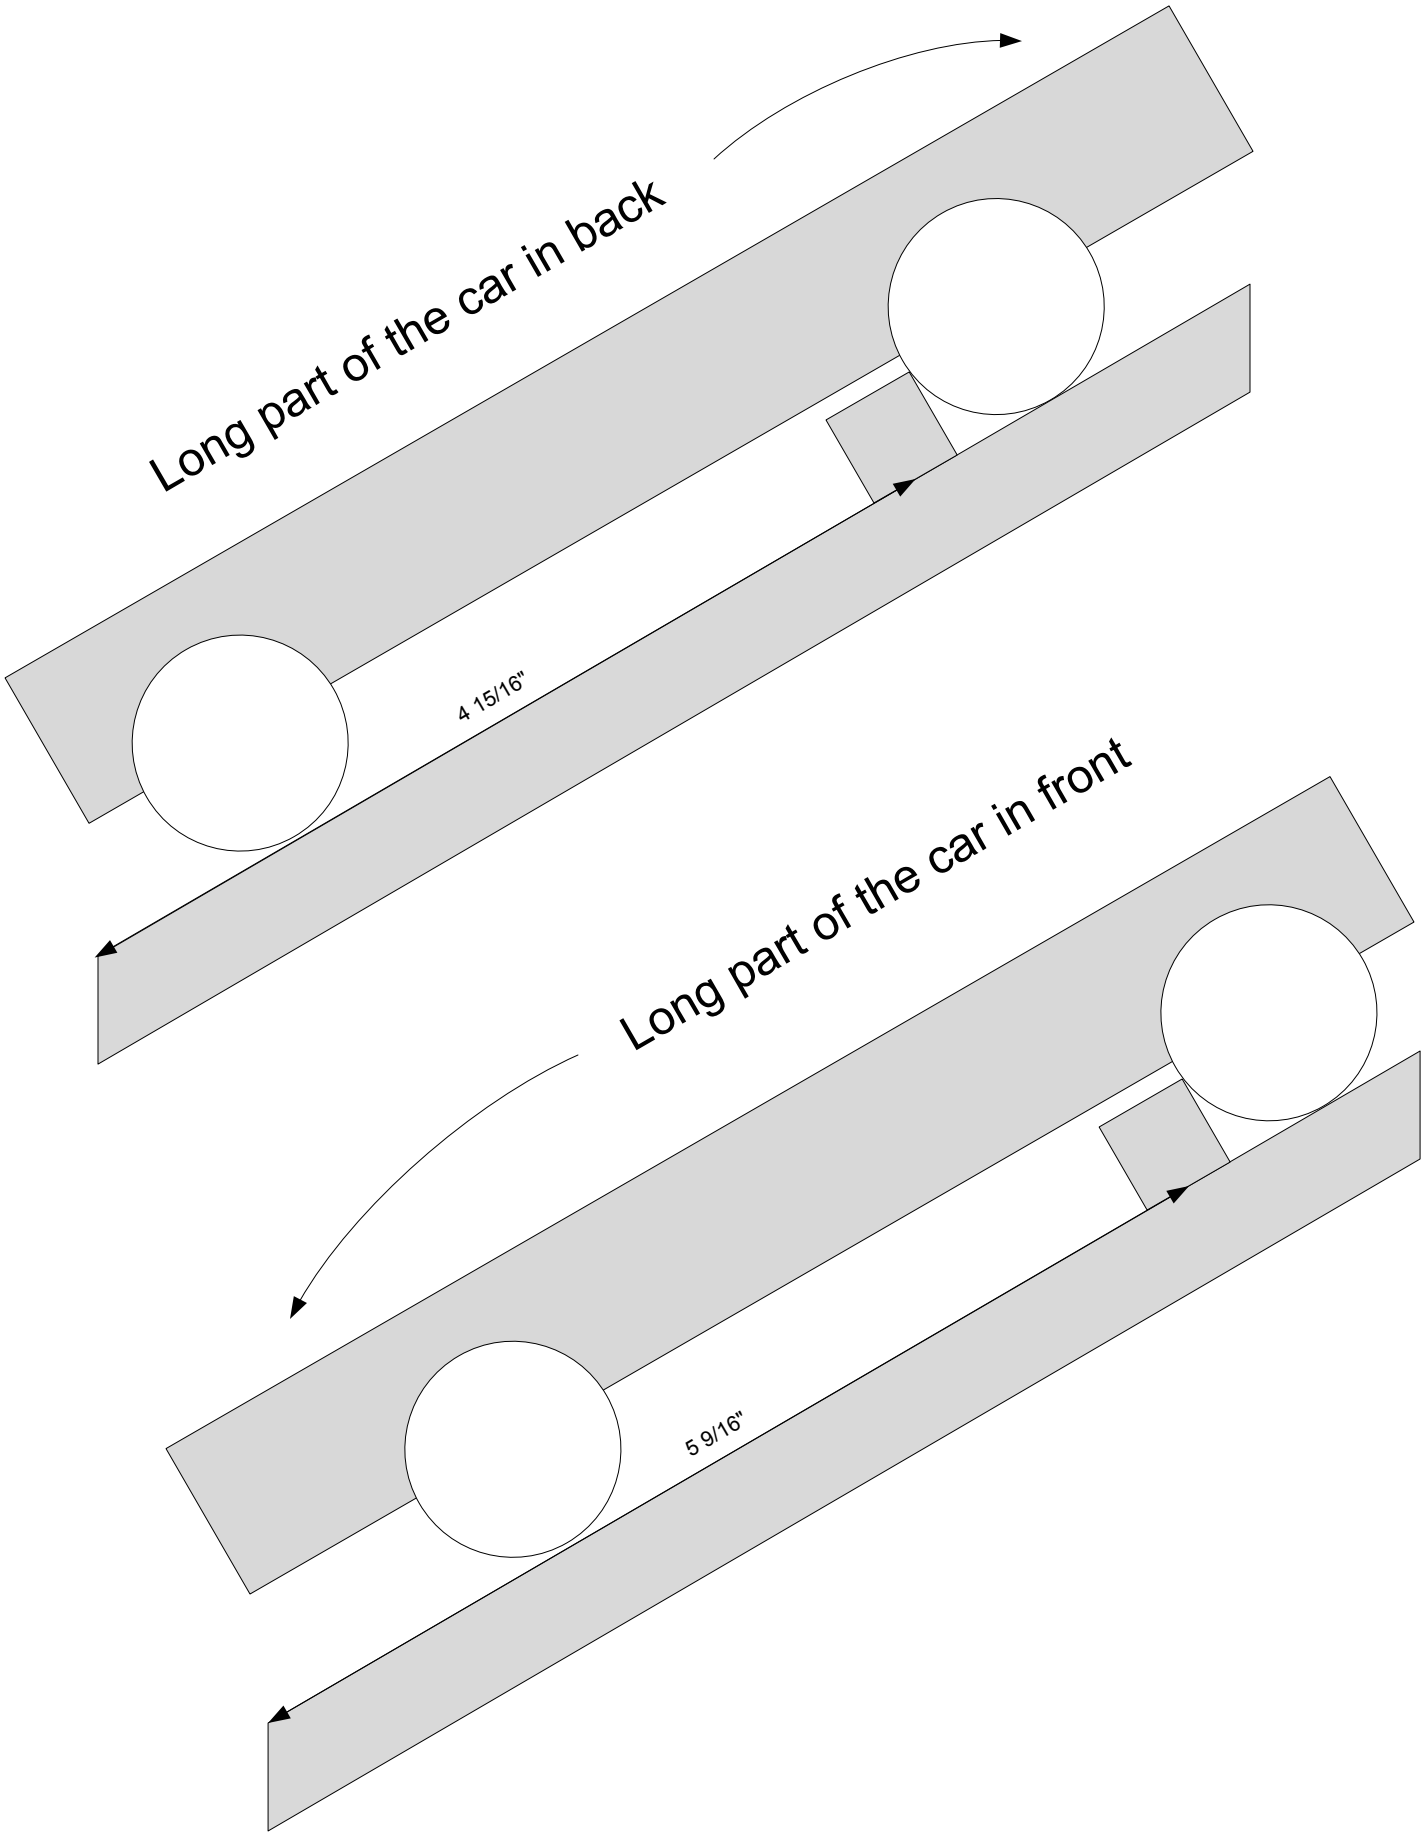
Long part of the car in back
4 15/16"
Long part of the car in front
5 9/16"